



Funktionstasten-Belegung DS6

Konfiguration des Soundmoduls

Im Auslieferungszustand ist das SX6-Modul mit einem DS6 Sound folgendermaßen konfiguriert (Soundabhängig):

Auslieferungszustand

Funktionstaste	#-Nummer	CV-Nummer
0	38	903 (CV1024 = 0)
1	3	904 (CV1024 = 0)
2	2	905 (CV1024 = 0)
3	1	906 (CV1024 = 0)
4	6	907 (CV1024 = 0)
5	14	908 (CV1024 = 0)
6	32	909 (CV1024 = 0)
7	4	910 (CV1024 = 0)
8	19	911 (CV1024 = 0)
9	23	912 (CV1024 = 0)
10	22	913 (CV1024 = 0)
11	31	914 (CV1024 = 0)
12	36	915 (CV1024 = 0)
13	38	916 (CV1024 = 0)
14	38	917 (CV1024 = 0)
15	27	918 (CV1024 = 0)
16	35	919 (CV1024 = 0)
17	29	920 (CV1024 = 0)
18	11	921 (CV1024 = 0)
19	10	922 (CV1024 = 0)
20	7	923 (CV1024 = 0)
21	0	924 (CV1024 = 0)
22	5	925 (CV1024 = 0)
23	33	926 (CV1024 = 0)
24	9	927 (CV1024 = 0)
25	15	928 (CV1024 = 0)
26	38	929 (CV1024 = 0)
27	38	930 (CV1024 = 0)
28	26	931 (CV1024 = 0)
29	17	900 E (CV1024 = 5)
30	28	901 E (CV1024 = 5)
31	24	902 E (CV1024 = 5)
32	39	903 E (CV1024 = 5)
33	34	904 E (CV1024 = 5)
34	99	905 E (CV1024 = 5)



35	18	906 E (CV1024 = 5)
36	16	907 E (CV1024 = 5)
37	12	908 E (CV1024 = 5)
38	13	909 E (CV1024 = 5)
39	8	910 E (CV1024 = 5)